



e-learning

# **Basic Knowledge of Discrete Semiconductor Device**

## Chapter I Basis of Semiconductors


Toshiba Electronic Devices & Storage Corporation

Mar. 2025

# What is a Semiconductor?

A "semiconductor" is a material with intermediate properties between a "conductor" that conducts electricity well, like metals, and an "insulator" that barely conducts electricity. Two types of semiconductors, N-type and P-type, can be created by adding impurities (diffusion/doping) to an intrinsic semiconductor that does not contain impurities. These will exhibit the properties of a conductor or insulator when voltage, current, light, heat, etc., are applied. Furthermore, by combining these, devices such as diodes, transistors, and ICs (integrated circuits) can be created.

The ease with which electricity flows is related to the magnitude of the material's electrical resistance. If the electrical resistance is high, the current will not flow easily, and if the electrical resistance is low, the current will flow easily. When the ease with which electricity passes is expressed as resistivity, conductors are:  $10^{-8}$  to  $10^{-4}$   $\Omega\text{cm}$ , insulators are:  $10^8$  to  $10^{18}$   $\Omega\text{cm}$ , while semiconductors are in the range of around  $10^{-4}$  to  $10^8$   $\Omega\text{cm}$ . Conductors include gold, silver, copper, iron, and aluminum. Insulators include glass, rubber, oil, and plastic. Semiconductors include single elements such as silicon (Si) and germanium (Ge), and compounds such as gallium arsenide (GaAs), silicon carbide (SiC), silicon germanium (SiGe), and gallium nitride (GaN).

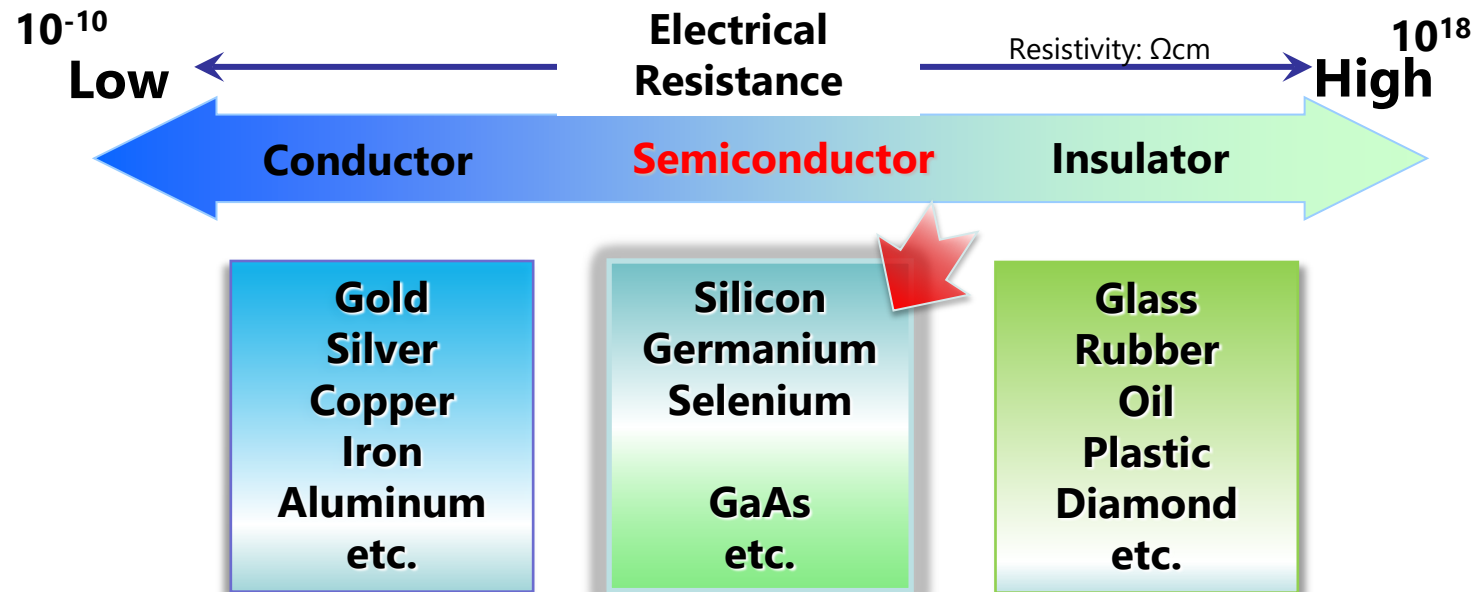

# Semiconductor raw materials

Silicon (Si) and germanium (Ge), which are the main raw materials for semiconductors, belong to Group IV.\* Pure crystals (intrinsic semiconductors) have properties close to those of an insulator. However, adding trace amounts of impurities (diffusion or doping) significantly reduces the electrical resistance and makes them exhibit the properties of a conductor. Depending on the type of impurity added, n-type and p-type semiconductors can be formed. Impurities used to form n-type semiconductors include phosphorus (P), arsenic (As), and antimony (Sb). Impurities used to form p-type semiconductors include boron (B), gallium (Ga), and indium (In).

Compound semiconductors are made from multiple elements, unlike silicon semiconductors, which are made from a single element. Examples of combinations include elements from group III and group V, group II and group VI, and group IV elements. SiC and GaN, which are wide band gap semiconductors that have been in the spotlight recently, are also compound semiconductors.

\*: Currently, the long periodic table is generally used, but the short periodic table is used here because it is easier to explain the properties and behavior of the elements that are the raw materials for semiconductors, as they are arranged based on the electron shells of the atoms. In the short periodic table, the groups of elements are designated by Roman numerals, while in the long periodic table, they are designated by Arabic numerals, and their values are also different. For example, Si is both in group IV and group 14.

\*Doping phosphorus (P) of **Group V** into silicon (Si) of **Group IV** makes **n-type semiconductor**.

\*Doping boron (B) of **Group III** into silicon (Si) of **Group IV** makes **p-type semiconductor**.

| Element(s) | Material                          |
|------------|-----------------------------------|
| Single     | Si, Ge                            |
| Compound   | Group II-VI    ZnSe   CdTe        |
|            | Group III-V    GaAs   InGaN   InP |
|            | Group IV-IV    SiC                |


| Group II               | Group III             | Group IV               | Group V                | Group VI               |
|------------------------|-----------------------|------------------------|------------------------|------------------------|
| <b>Be</b><br>Beryllium | <b>B</b><br>Boron     | <b>C</b><br>Carbon     | <b>N</b><br>Nitrogen   | <b>O</b><br>Oxygen     |
| <b>Mg</b><br>Magnesium | <b>Al</b><br>Aluminum | <b>Si</b><br>Silicon   | <b>P</b><br>Phosphorus | <b>S</b><br>Sulfur     |
| <b>Zn</b><br>Zinc      | <b>Ga</b><br>Gallium  | <b>Ge</b><br>Germanium | <b>As</b><br>Arsenic   | <b>Se</b><br>Selenium  |
| <b>Cd</b><br>Cadmium   | <b>In</b><br>Indium   | <b>Sn</b><br>Tin       | <b>Sb</b><br>Antimony  | <b>Te</b><br>Tellurium |
| <b>Hg</b><br>Mercury   | <b>Tl</b><br>Thallium | <b>Pb</b><br>Lead      | <b>Bi</b><br>Bismuth   | <b>Po</b><br>Polonium  |

# n-type Semiconductor

**An n-type semiconductor** is a group IV intrinsic semiconductor such as silicon (Si) doped with group V elements such as phosphorus (P), arsenic (As), or antimony (Sb) as an impurity.

Group IV elements are tetravalent elements with four valence electrons, while group V elements are pentavalent elements with five valence electrons. A single crystal made only of tetravalent elements such as Si is bound to other elements by covalent bonds, and has no excess electrons or holes. This state without impurities is an intrinsic semiconductor. When a small amount of phosphorus is added to this single crystal (diffusion/doping), one of the valence electrons of the phosphorus becomes an excess electron that can move freely (free electron). When a voltage is applied, this free electron is attracted to the positive electrode and moves, causing a current to flow. For this reason, the resistivity of n-type semiconductors (and p-type semiconductors described below) decreases as the impurity concentration increases.

Si and impurities such as P that make up n-type semiconductors are electrically neutral as single atoms. Therefore, n-type semiconductors are also electrically neutral. However, in n-type semiconductors, the particles (carriers) that carry the charge are free electrons. These carriers have a negative charge, which is why they are called n-type.

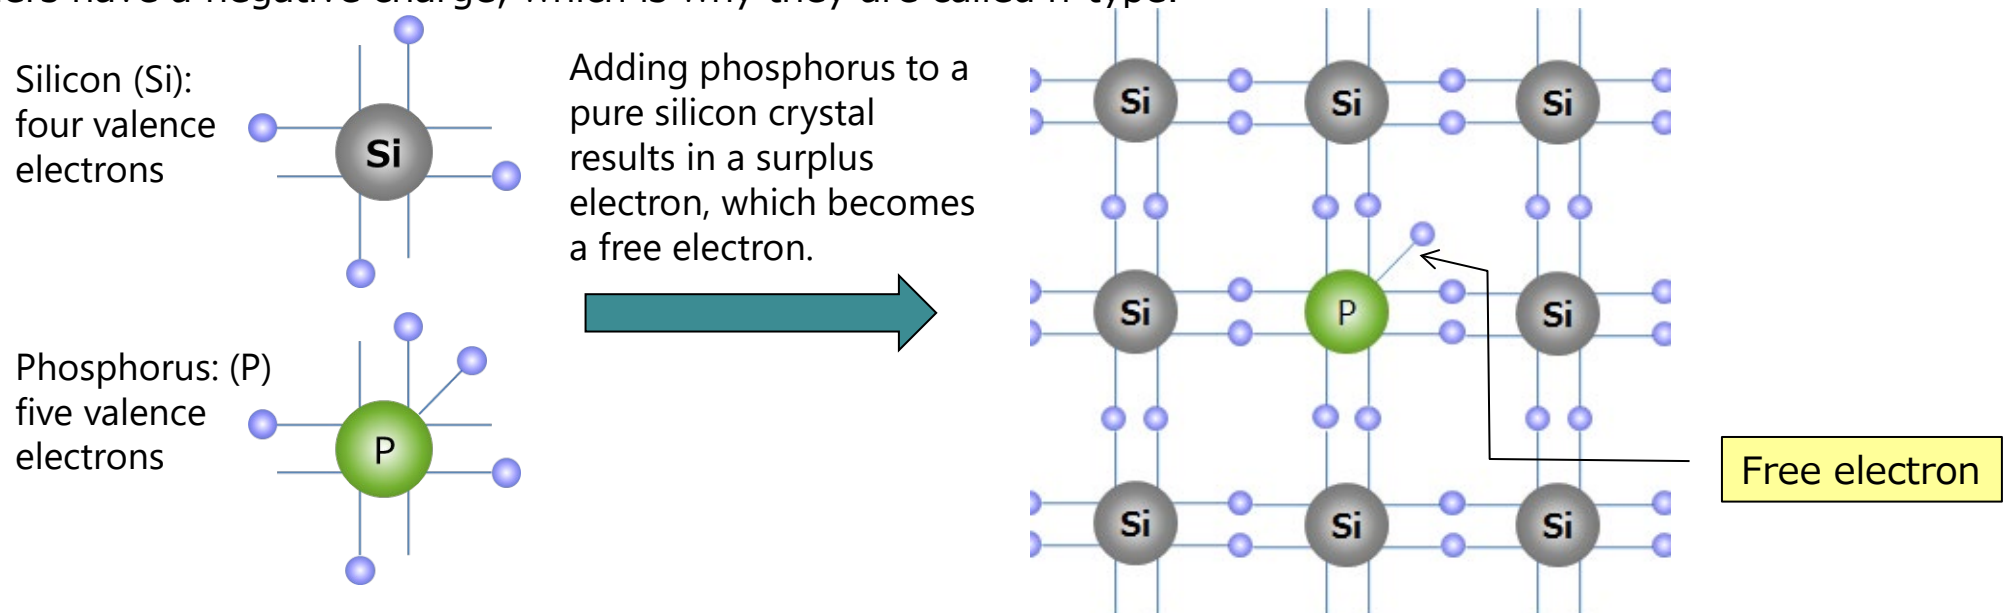


\* This free electron is the carrier of an n-type semiconductor.

# p-type Semiconductor

**A p-type semiconductor** is a group IV intrinsic semiconductor such as silicon (Si) doped with group III boron (B) or indium (In) as an impurity.

Group IV elements are tetravalent elements with four valence electrons, while group III elements are trivalent elements with three valence electrons. A single crystal made only of tetravalent elements such as Si is an intrinsic semiconductor in which all bonds are connected to other elements by covalent bonds. When a small amount of boron is added to this single crystal (diffusion/doping), an electron becomes insufficient at one of the bonds between silicon and boron, creating a hole where an electron is missing. This hole is called a hole. When a voltage is applied in this state, a nearby electron moves to the hole, so the place where the electron was becomes a new hole, and it appears that the holes move one after another to the negative pole.

In a p-type semiconductor, the particles (carriers) that carry the charge are holes. Since holes are the parts where there is a shortage of electrons, they have a positive charge. For this reason, they are called p-type.

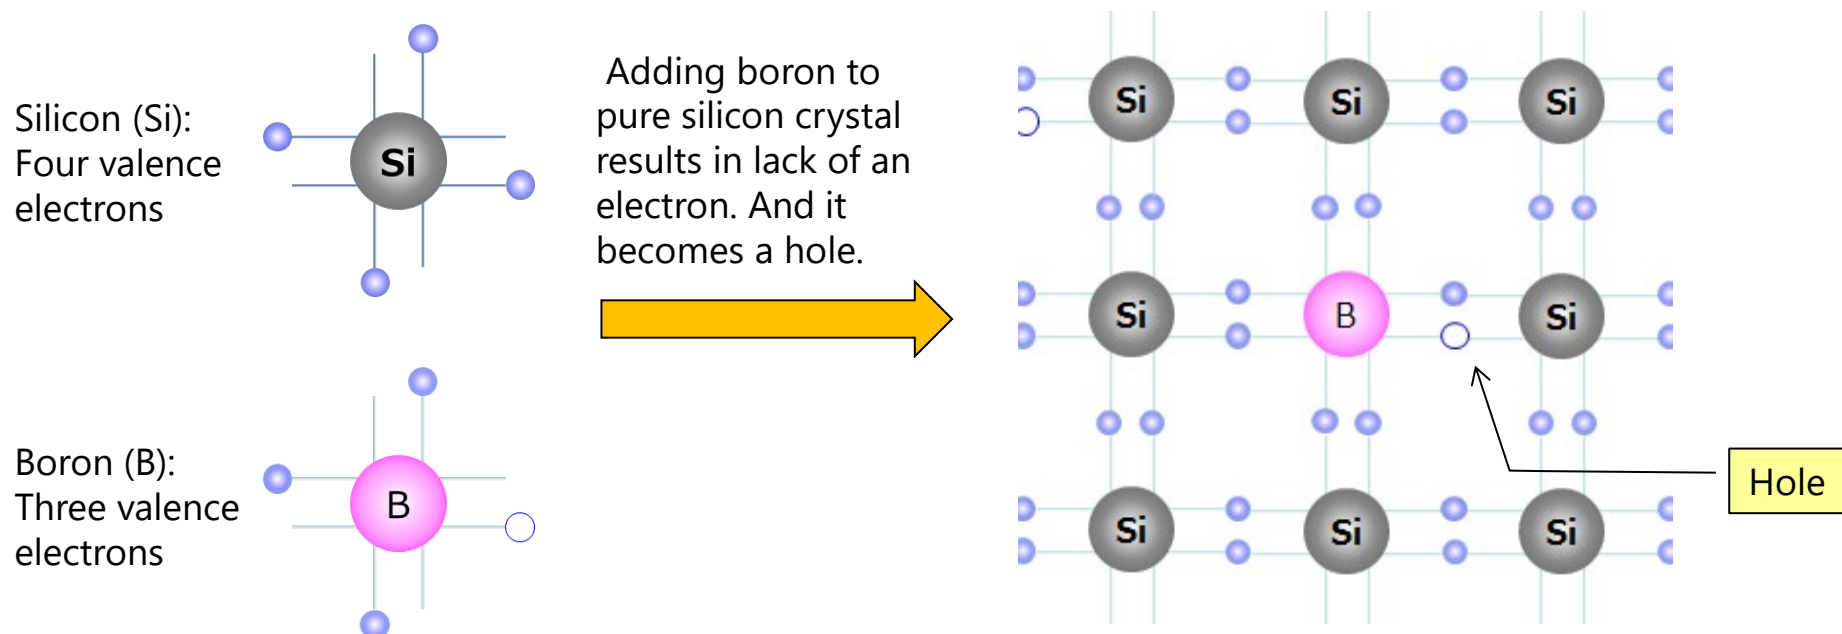

\* This hole is the carrier of a p-type semiconductor.

# Compound Semiconductor

**Compound semiconductors** are compounds made of two or more elements, unlike semiconductors made of a single element such as Si, which is the mainstream of semiconductors.


There are compound semiconductors that combine elements from group III and group V, elements from group II and group VI, and elements from group IV. Examples include GaAs, InP, InGaAlP, and SiGe, which have traditionally been used as high-frequency devices and optical semiconductors. InGaN has also attracted attention as a blue LED and laser diode, and SiC and GaN have been commercialized as materials for power semiconductors.

Compound semiconductors used in devices have higher mobility (high frequency, high switching, high efficiency) than single-element semiconductors such as Si, and have a wide band gap (high temperature operation, high voltage resistance) due to the strong bonding force between atoms. As a result, compound devices are used in power devices, optical devices such as LEDs, and high-frequency devices. Semiconductors with wide band gaps, including single-element semiconductors (such as diamond), are also called wide-band gap semiconductors.

【Example of GaAs】

Gallium (Ga) :  
three valence  
electrons


Arsenic (As):  
five valence  
electrons

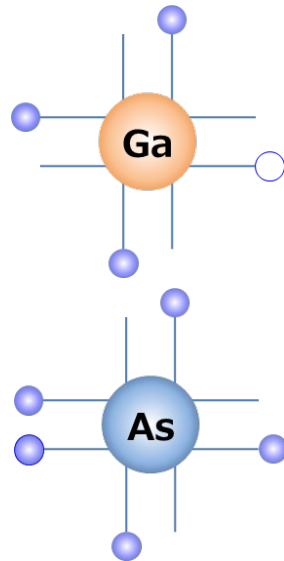

More gallium than  
arsenic makes  
p-type semiconductor.



More arsenic than  
gallium makes  
n-type semiconductor.

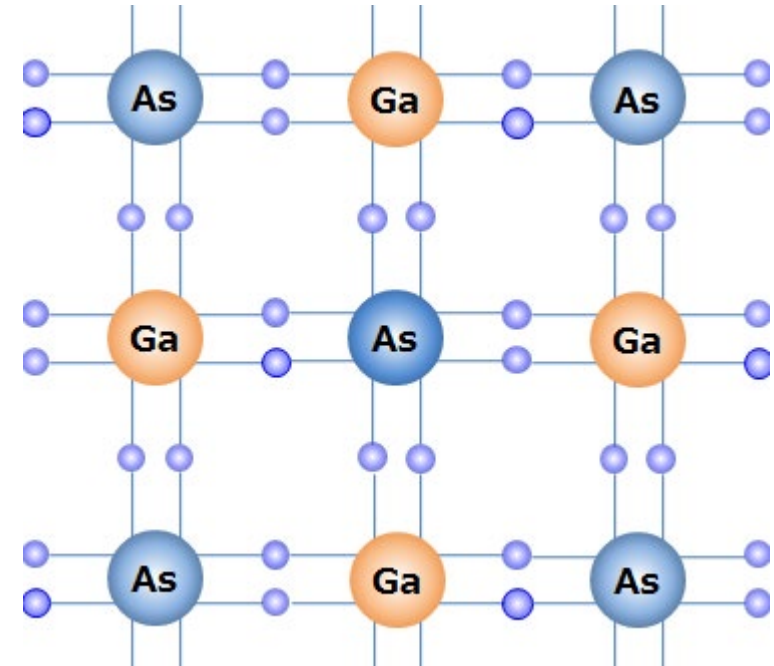

Typical compound semiconductors

Group II-VI : ZnSe

Group III - Group V : GaAs, GaN, InP, InGaAlP, InGaN

Group IV - Group IV : SiC, SiGe


# pn Junction

**The interface between a p-type semiconductor and an n-type semiconductor is called a pn junction.** When a p-type semiconductor and an n-type semiconductor are joined (not actually joined, but formed by doping so that they are adjacent to each other), the carriers, holes and free electrons, are attracted to each other and combine and disappear near the boundary. Since there are no carriers in this area, it is called a depletion layer and is in the same state as an insulator. (No bias state)

- **Forward direction** (connect the positive pole to the p-type region and the negative pole to the n-type region and apply voltage): When the applied voltage is gradually increased and exceeds the forward voltage (about 0.7V for Si), electrons flow one after another from the n-type region to the p-type region, and electrons that do not combine with holes and disappear move to the positive pole, allowing current to flow. For an explanation of the physical properties of a pn junction, see the following e-learning.

[Basics of Schottky Barrier Diodes 1-3. pn junction](#)


**Reverse direction** (connect the negative pole to the p-type region and the positive pole to the n-type region and apply voltage): No current flows. In the normal voltage range, the excess electrons in the n-type semiconductor move away from the boundary surface. The holes in the p-type semiconductor also move away from the boundary surface. This causes the depletion layer near the boundary surface to expand. However, if a voltage exceeding the breakdown voltage is applied, the pn junction enters a breakdown state due to the Zener effect (avalanche effect) and current flows suddenly. In a typical diode, this breakdown causes the performance to deteriorate and be destroyed.

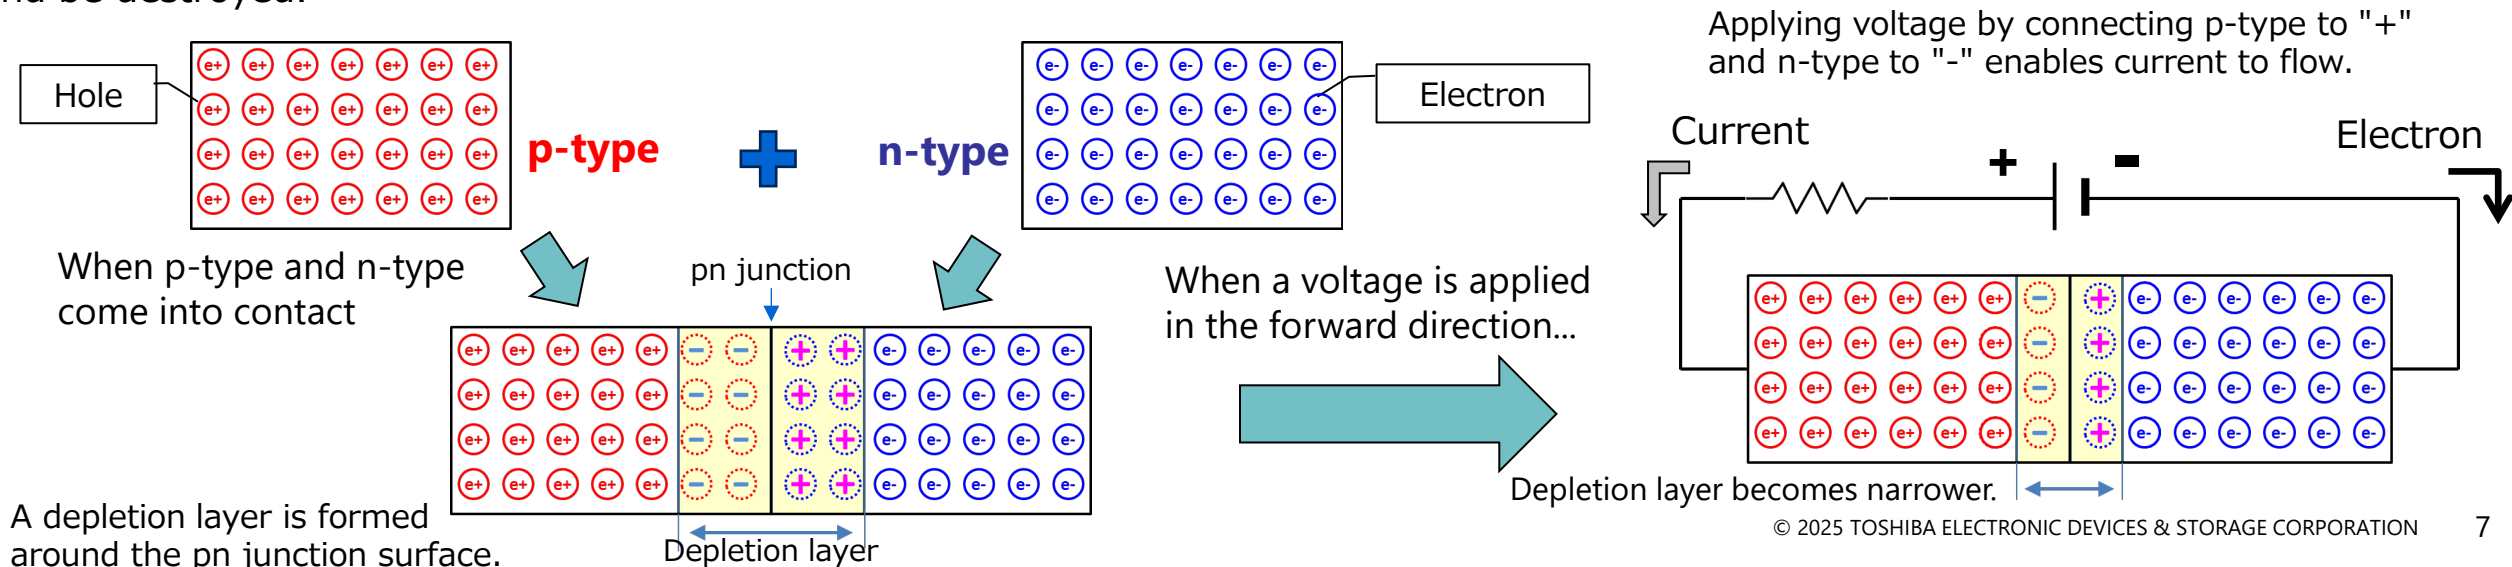

# Types of Semiconductor Devices

Electronic parts using semiconductors are called semiconductor devices.

Many kinds of semiconductor devices have been developed in line with the expansion of application fields and the progress of electronic equipment. "Discrete semiconductors" are single devices with a single function, such as transistors and diodes. "Integrated circuits (ICs)" are devices with multiple functional elements mounted on one chip. Typical ICs include memories, microprocessors (MPUs), and logic ICs. LSI raised the degree of integration of ICs. Classification by general function/structure is shown below.

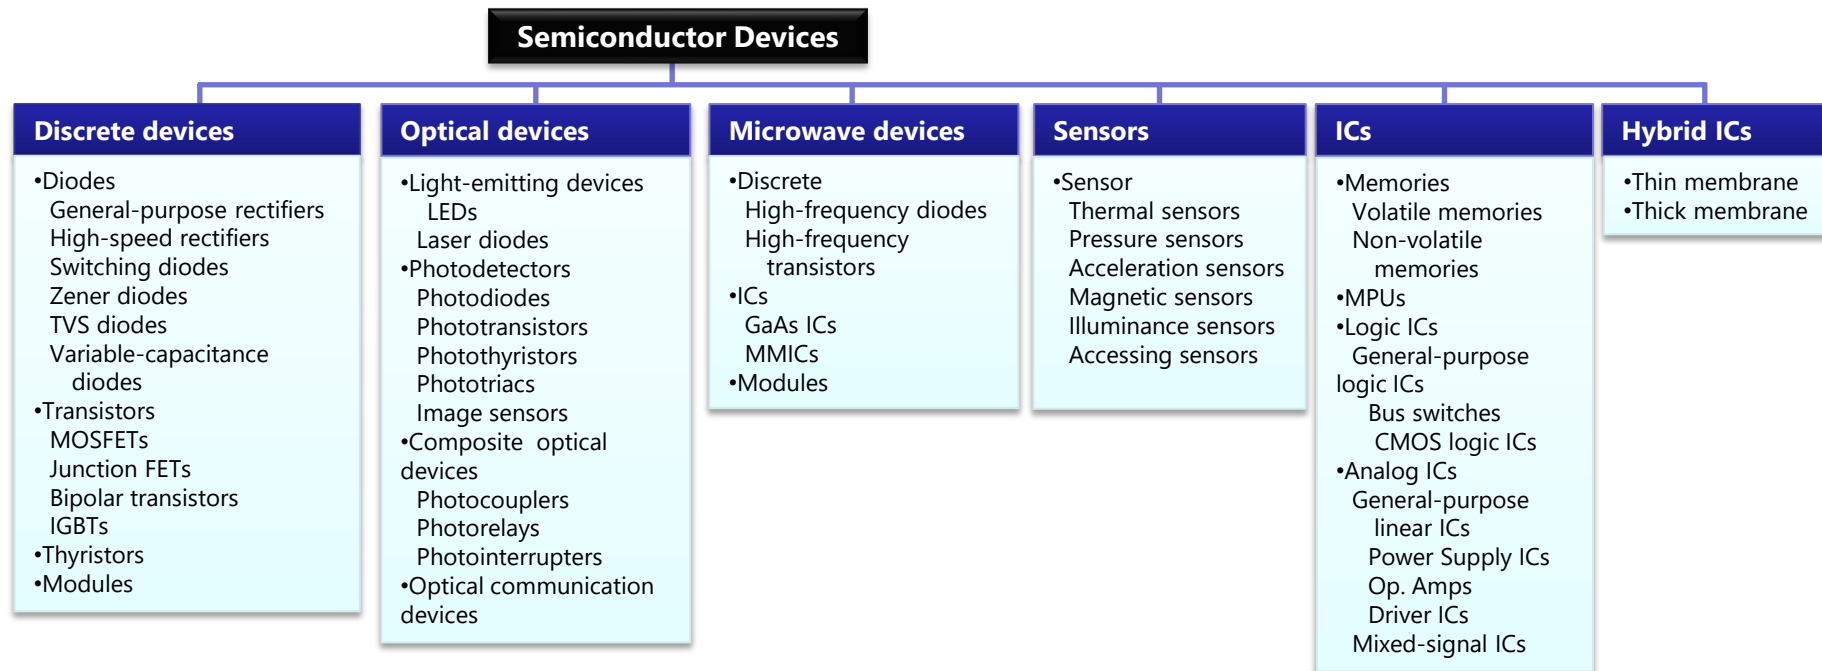

# RESTRICTIONS ON PRODUCT USE

Toshiba Corporation and its subsidiaries and affiliates are collectively referred to as "TOSHIBA". Hardware, software and systems described in this document are collectively referred to as "Product".

- TOSHIBA reserves the right to make changes to the information in this document and related Product without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application with which the Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. **TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.**

**•PRODUCT IS NEITHER INTENDED NOR WARRANTED FOR USE IN EQUIPMENTS OR SYSTEMS THAT REQUIRE EXTRAORDINARILY HIGH LEVELS OF QUALITY AND/OR RELIABILITY, AND/OR A MALFUNCTION OR FAILURE OF WHICH MAY CAUSE LOSS OF HUMAN LIFE, BODILY INJURY, SERIOUS PROPERTY DAMAGE AND/OR SERIOUS PUBLIC IMPACT ("UNINTENDED USE").** Except for specific applications as expressly stated in this document, Unintended Use includes, without limitation, equipment used in nuclear facilities, equipment used in the aerospace industry, lifesaving and/or life supporting medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, and devices related to power plant. **IF YOU USE PRODUCT FOR UNINTENDED USE, TOSHIBA ASSUMES NO LIABILITY FOR PRODUCT.** For details, please contact your TOSHIBA sales representative or contact us via our website.

- Do not disassemble, analyze, reverse-engineer, alter, modify, translate or copy Product, whether in whole or in part.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied, by estoppel or otherwise.
- ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE FOR PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY WHATSOEVER, INCLUDING WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR LOSS, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND LOSS OF DATA, AND (2) DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO SALE, USE OF PRODUCT, OR INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY OF INFORMATION, OR NONINFRINGEMENT.**

- Product may include products using GaAs (Gallium Arsenide). GaAs is harmful to humans if consumed or absorbed, whether in the form of dust or vapor. Handle with care and do not break, cut, crush, grind, dissolve chemically or otherwise expose GaAs in Product.
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). Product and related software and technology may be controlled under the applicable export laws and regulations including, without limitation, the Japanese Foreign Exchange and Foreign Trade Law and the U.S. Export Administration Regulations. Export and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.

•Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of Product. Please use Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. **TOSHIBA ASSUMES NO LIABILITY FOR DAMAGES OR LOSSES OCCURRING AS A RESULT OF NONCOMPLIANCE WITH APPLICABLE LAWS AND REGULATIONS.**

**TOSHIBA**